




The Montessori Room

Pikler Triangle Assembly Instructions

Thank you for purchasing a Pikler Triangle Climber from us. We hope these instructions will help you assemble it quickly and properly. Please follow along so that it is safe to use. If at any point you have questions or seem to be missing a part, please contact us.

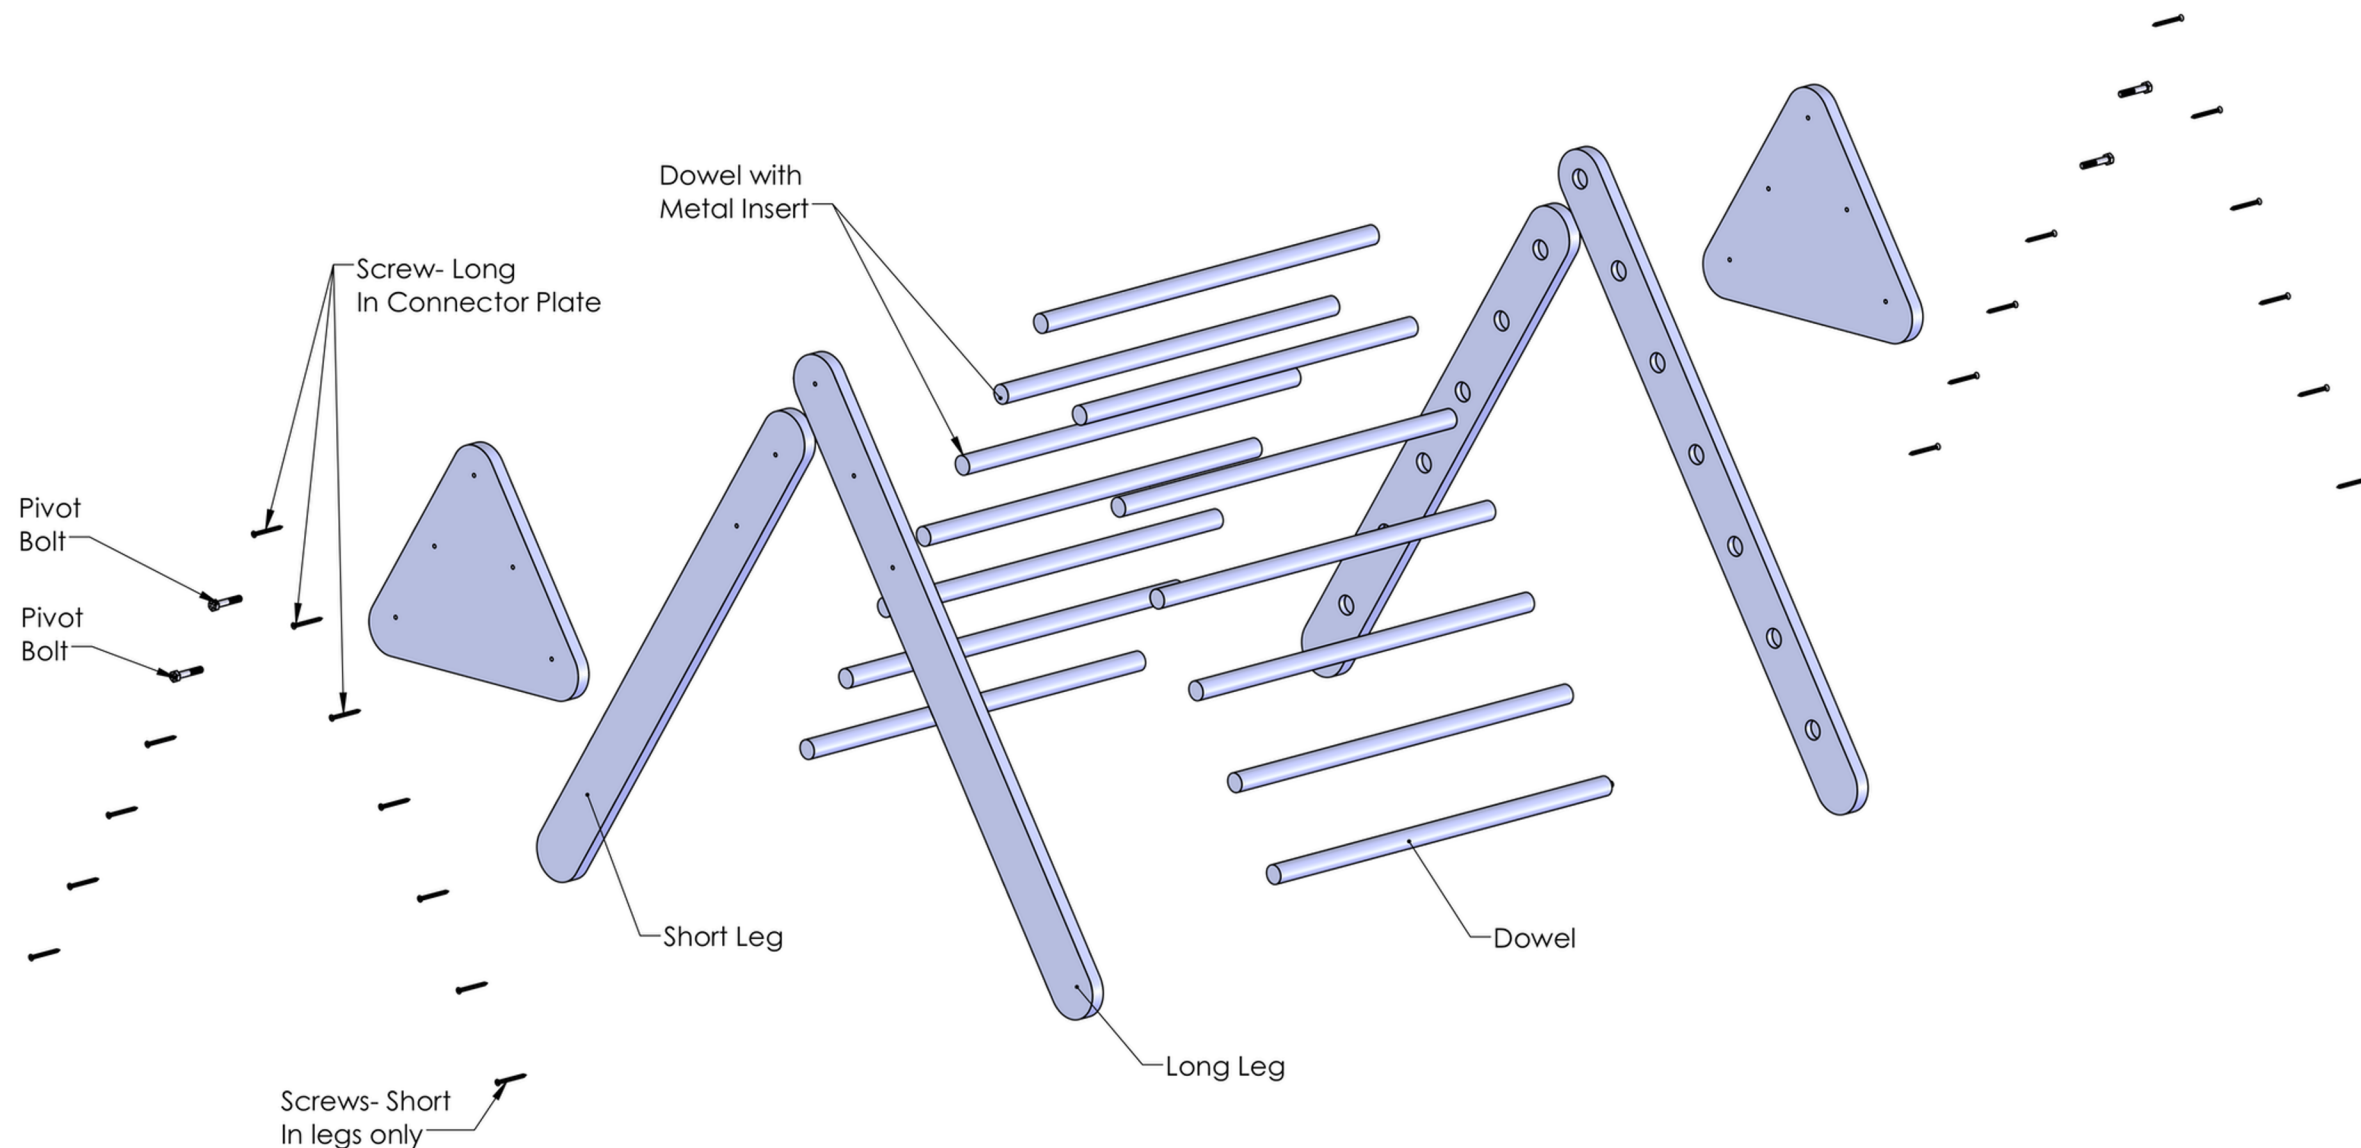

WARNING: As can be considered a climbing apparatus, please be aware that injuries can occur. Make sure that the Pikler climber seems safe to use and is sturdy. Also make sure that while it is in use that you observe your child at all times while using it, and that the area is safe. Do not place it near hard edges such as fireplace mantles or stairs. A mat underneath would be advised. Contact us if the product seems unsafe or if there are any questions.

Pikler Triangle Assembly Instructions (PAGE 1)

1. Locate both short legs of the Pikler and the 2 dowels with metal inserts (see image 1).
2. Place the 2 dowels with metal inserts into the top 2 slots of the short legs, the slots with the larger screw holes.
3. Place 4 regular dowels into the bottom 4 slots.
4. Find the triangle to attach both set of legs (see image 2).
5. Line up with two larger holes on the triangle with the holes on the short leg that have the dowels with metal inserts. Use the included Allen key and pivot bolts to screw together the triangle, short leg, and the 2 dowels with the metal inserts.
6. Use the short screws to attach the rest of the dowels to the short leg (bottom 4 dowels).
7. Complete steps 5 and 6 for the other side of the short legs.

Instructions continued on page 2.

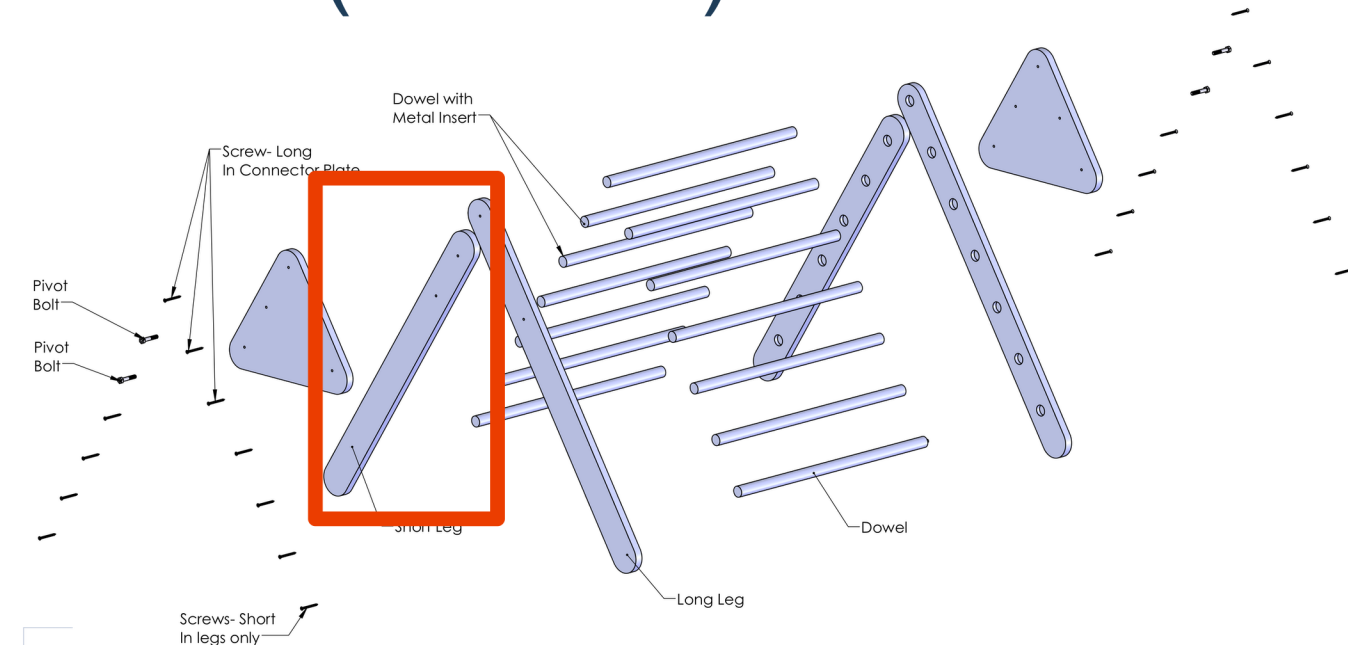


IMAGE 1

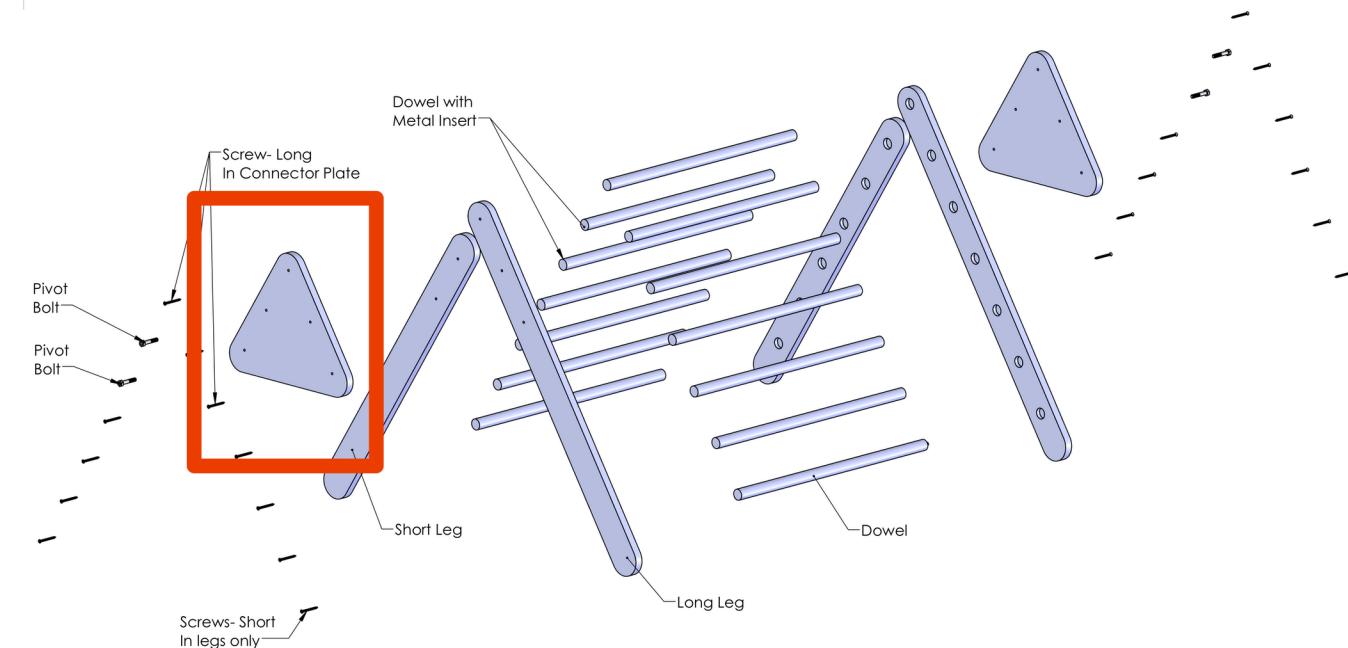


IMAGE 2

WARNING: Never leave children unattended when using the Pikler Triangle

Pikler Triangle Assembly Instructions (PAGE 2)

8. Locate the longer legs of the Pikler (see image 3).
9. Place the 7 dowels into the slots on both the longer legs.
10. Use the short screws to attach the bottom 4 dowels. Do this for both sides.
11. Attach the longer legs to the rest of the Pikler by screwing in the top 3 dowels using the long screws (see Image 4).
12. To fold the Pikler for storage, remove the pivot bolts using the Allen key and fold the two sides together. Store the pivot bolts and Allen key in a safe place for re-assembly later.

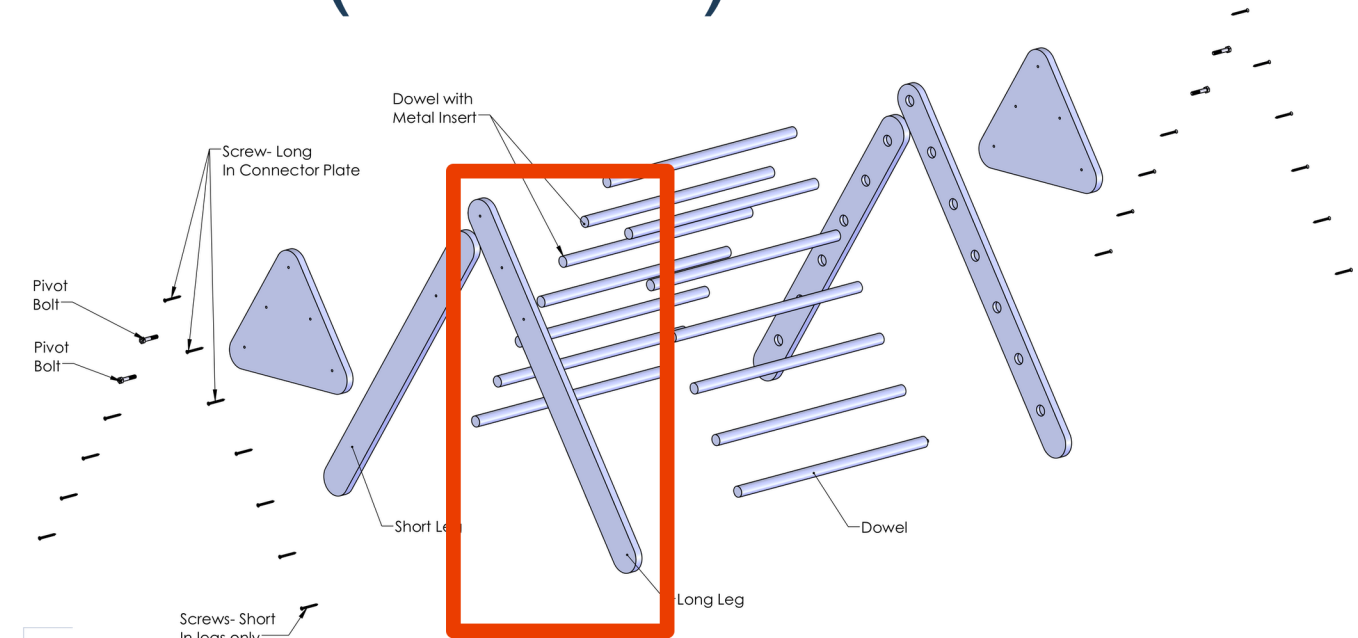


IMAGE 3

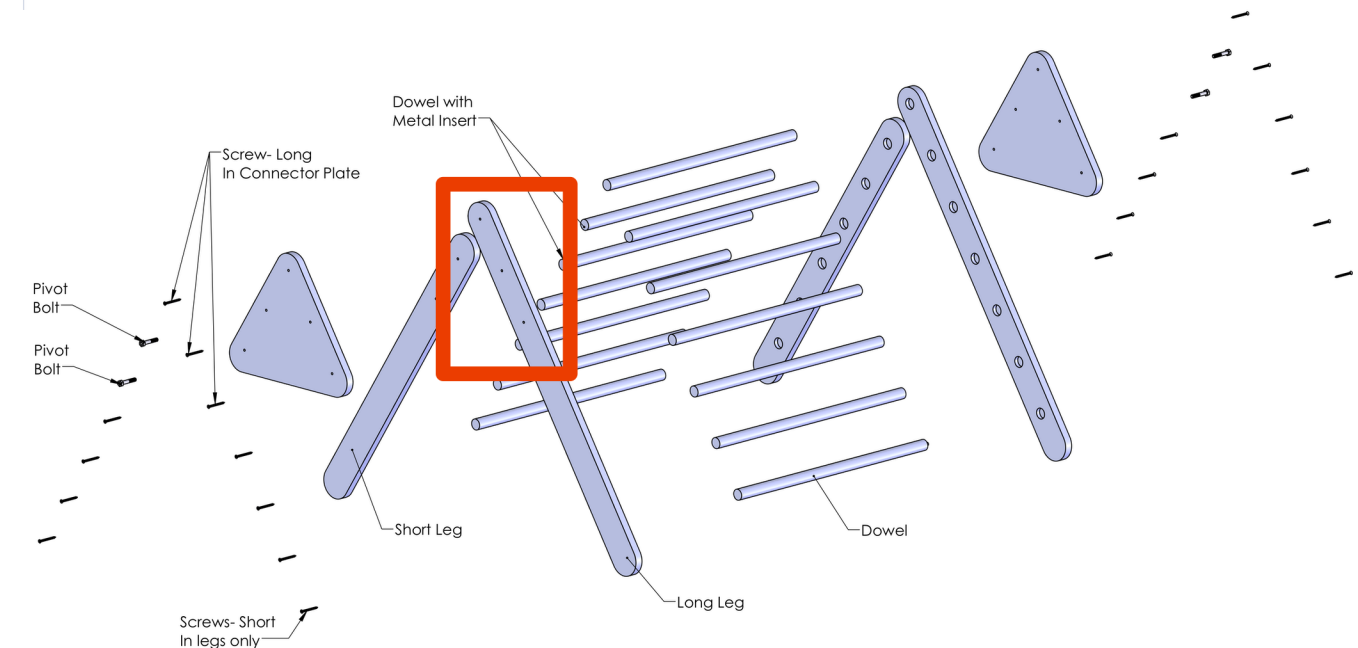


IMAGE 4

WARNING: Never leave children unattended when using the Pikler Triangle